

MODE SELECT

TUNING:


DIMENSION and SLAPBACK

MODE: this controls the tuning of double tracked voices up to +/- 30 Cents.

ABBY MODE this controls Modulation Rate and Depth.

REVERB:

Controls Amount of Vintage Studio Echo Chamber Style Reverb, with roll-offs at 600Hz and 10KHz.

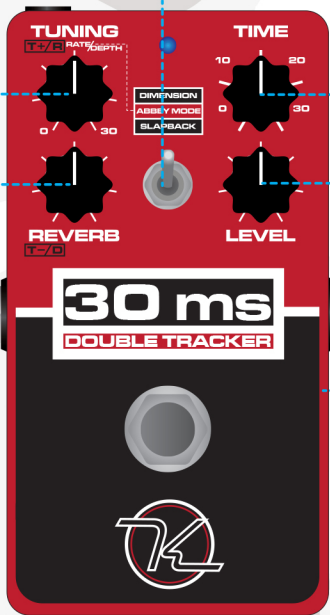

TIME:

Controls Delay time from 0-30ms
In SLAPBACK Mode, from 30-120ms

LEVEL:

Controls output level of the effect.

INTERNAL SWITCHES

MONO CABLE OPERATION		
SW1	SW2	MODE
UP	UP	MONO+REVERB
UP	DWN	MONO+DBL TRK PRO

<<FACTORY
DEFAULT

30ms
DOUBLE TRACKER

EFFECT TYPE:

Double Tracker / Short Time Delay / Static Chorus / Reverb

Power Requirement:

9VDC Center Negative, 65mA+ Power Supply Required.

Input/Output:

Mono Instrument In,
Mono or Stereo TRS Output

Output is Mono when standard instrument cable is used. When TRS cable is used, RING carries original signal, TIP carries effected signal.

TRS Stereo Cable Operation				
SW1	SW2	TIP OUTPUT	RING OUTPUT	MODE
UP	UP	FX+DRY	DRY	FX W/ REVERB (STOCK)
UP	DWN	FX+DRY	DRY	DOUBLE TRACK PRO
DWN	UP	FX	DRY	FX W/ REVERB (STOCK)
DWN	DWN	FX	DRY	DOUBLE TRACK PRO

Note: Tip Turns Off in Bypass Any Time SW1 is down