

American DJ®

KRYPTO SYNC



User Instructions

American DJ®
4295 Charter Street
Los Angeles, CA. 90058
www.americandj.com

Krypto Sync™

General Introduction

Unpacking: Thank you for purchasing the Krypto Sync™ by American DJ®. Every Krypto Sync™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for any damage and be sure all equipment necessary to operate the system has arrived intact. In the event that damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return the unit to your dealer without first contacting customer support.

Introduction: Thank you for purchasing the American DJ® Krypto Sync™. The Krypto Sync™ is a unique laser effect that projects several different patterns. It is a sound sensitive unit that can operate as a stand-alone unit or in a Master/Slave configuration.

Customer Support: American DJ® provides a toll free customer support line, to provide set up help and to answer any questions should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. For service related issue please contact American DJ®. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2610

E-mail: support@americandj.com

To purchase parts online visit <http://parts.americandj.com>

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact American DJ® Customer Support.

PLEASE do not discard the shipping carton in the trash. Please recycle when ever possible.

Please carefully read and understand the instructions in this manual thoroughly before attempting to operate this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

CAUTION IMPORTANT! When installing this projector, make sure that it is mounted in a manner that prevents the audience from looking directly into the beam, and the beam from striking the audience.

- 4.9mW Green Laser Diode
- Built-In Hanging Yoke
- Sound Active with Internal Microphone
- Master/Slave Operation
- Fan Cooled

The Krypto Sync™ carries a 90 day limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.



CAUTION IMPORTANT! When installing this projector, make sure that it is mounted in a manner that prevents the audience from looking directly into the beam, and the beam from striking the audience.

Safety Issues:


- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture.
- Do not spill water or other liquids into or on to your unit.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short. Do not attempt to operate this unit if the power cord has been frayed or broken.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never plug this unit in to a dimmer pack.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product out doors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit on safe and stable matter.
- Power cords should be routed so they are not likely to be walked on, or pinched by items placed upon or against them.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 9 for cleaning details.


- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen on, or liquid has been spilled into the unit.
 - C. The unit has been exposed to rain or water.
 - D. The unit does not appear to operate normally or exhibits a marked change in performance.

Fixture Cleaning: Due to fog residue, smoke, and dust cleaning the internal and external lenses should be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the out side casing.
2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
3. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew). In heavy use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp beam output.

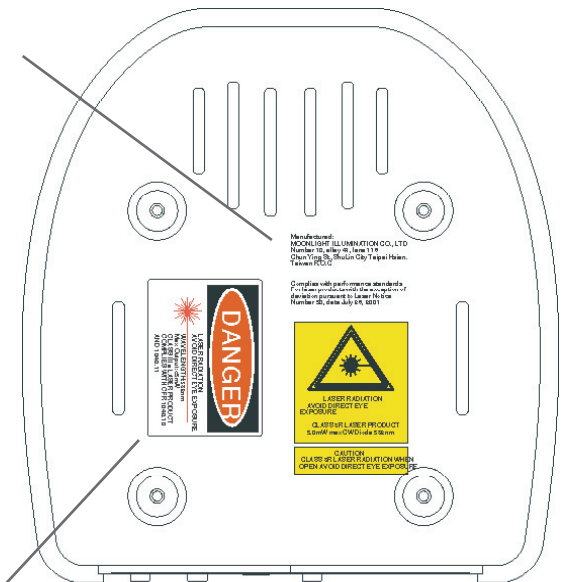

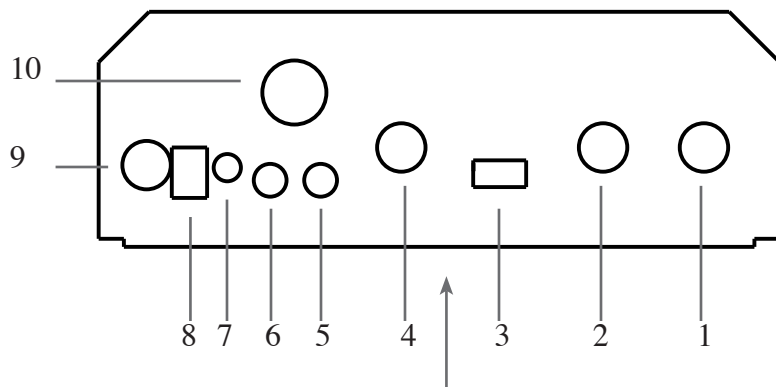

1. **Pattern Knob 2** - This knob, when adjusted, generates different patterns when in manual mode.
2. **Pattern Knob 1** - This knob, when adjusted, generates different patterns when in manual mode.
3. **Mode Switch** - This button is used to switch stand-alone mode or sound active, master/slave mode. When the switch is in the left position sound active, master/slave mode will be active. When the switch is in the right position stand-alone manual mode will be active.
4. **Scene Elapsed Time Adjust Knob** - This knob will only work in Sound Active mode. This knob adjusts the time it takes for the pattern to change. When the knob is turned to the maximum level it will take 8 seconds for the pattern to change.
5. **Signal Output** - This output connection is used when linking unit's in master/slave configuration. The connection uses a 3.5mm stereo microphone jack. Output is used when the unit has been selected as the master, and when linking more than one slave.
6. **Signal Input** - This input connection is used when linking unit's

in master/slave configuration. The connection uses a 3.5mm stereo microphone jack. The input is used when a unit has been selected as a slave unit. The input connection requires a 3.5mm microphone jack.

7. **Master LED** - This green LED will glow when the unit has been designated a Master unit, in a Master/Slave configuration.
8. **Dip Switches** - When dipswitch #1 is in the "On" position, the unit is designated as the Master, in master/slave mode.
9. **AC Adapter Connection** - This connection is used to supply main power to the fixture. Use only the supplied AC adapter. Be sure the main power matches the required power of your fixture.
10. **Microphone** - This microphone receives external low frequencies to trigger the unit in Sound-Active mode. This microphone is designed to receive low frequency sounds only, tapping on the microphone and high pitch sounds may not trigger the unit.

Power Supply: This unit is available in 120v, before plugging your fixture in be sure the source voltage in your area matches the required voltage for your American DJ® Krypto Sync.™

CAUTION IMPORTANT! : When installing this projector, make sure that it is mounted in a manner that prevents the audience from looking directly into the beam, and that the beam will not strike the audience.

General Operation: *Plug and Play operation.* The Krypto Sync has been tested at the factory there is no assembly necessary. The Krypto Sync™ is ready to be plugged in, out of the box. This Krypto Sync™ is a sound active unit that can function as a stand-alone unit, or in a Master/Slave configuration. The unit comes with several built-in patterns that automatically cycle through when the unit is operating, the patterns may not be selected manually. If the unit does not turn on, be sure the AC adapter is not bad, and then be sure the unit is properly plugged in to a matching wall outlet. If problem continue

to persist, please contact customer support for further instructions.

Stand-Alone Mode: After the unit has been plugged in, flip the mode switch to the right position. The unit should then start projecting the laser at whatever it is facing.

Master/Slave Mode: When set-up in a Master/Slave configuration, one unit is chosen as the master, the other units that are linked will follow whatever pattern the master projects. To set-up Master/Slave mode:

1. Select which unit will act as master, by putting dipswitch #1 into the “on” position, and connect the 3.5mm cable into the output connection on the back of the unit. The green LED on the back of the Master unit should glow.
2. Then simply connect the other end of the cable to the back of the slave unit, where the input connection is.

To connect more than one slave unit. Connect another 3.5mm cable to the output connection on the back of the slave unit, to the input connection on the back of the second slave unit and so on.

90 DAY LIMITED WARRANTY

A. American DJ® hereby warrants, to the original purchaser, American DJ® products to be free of manufacturing defects in material and workmanship for a period of 90 days from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the American DJ® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ® factory unless prior written authorization was issued to purchaser by American DJ®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. American DJ® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to American DJ® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

H. All lamps and fuses are not covered under this warranty.

Model: Krypto Sync™

Voltage:	120v~60Hz or 220v~50Hz
Laser:	4.9mW Green
Dimensions:	8" (L) x 7.5" (W) x 5.9" (H)
Weight:	2 Lbs./ 0.7 Kgs.
Duty Cycle:	None
Ventilation:	Fan Cooled
Warranty:	90 Day

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.