

# EUROLIVE

# B312A/B315A

## User manual

en

A50-78913-00001



[www.behringer.com](http://www.behringer.com)



# EUROLIVE B312A/B315A

## IMPORTANT SAFETY INSTRUCTIONS



**CAUTION:** To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside; refer servicing to qualified personnel.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure—voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 12) Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 13) Only use attachments/accessories specified by the manufacturer.
- 14) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the

apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



15) Unplug this apparatus during lightning storms or when unused for long periods of time.

16) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

17) CAUTION - These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions unless you are qualified to do so.



### WARNING

THIS EQUIPMENT IS CAPABLE OF DELIVERING SOUND PRESSURE LEVELS IN EXCESS OF 90 dB, WHICH MAY CAUSE PERMANENT HEARING DAMAGE.

#### Ventilation:

The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa rug, or similar surface that may block the ventilation openings: or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

#### Check the floor:

Always check the floor for stability before you set up the speaker cabinet. Vibrating floors (e.g. elements/components on the stage) do not provide reliable support for speaker stacks. So, always set up your speakers on a solid and even support.

#### Make sure that speaker cabinets are set up properly:

Set up your speaker cabinet at a distance to dance floors or other audience areas, so as to avoid that somebody can knock over a speaker stack.

# **EUROLIVE B312A/B315A**

## **Processor-Controlled 400-Watt 2-Way PA Speaker System with 12"/15" Woofer and 1.25" Titanium Compression Driver**

- ▲ High-power 400-Watt 2-way PA sound reinforcement speaker system for live and playback applications
- ▲ Ultra-compact lightweight system delivers excellent sound even at extreme sound pressure levels
- ▲ Integrated sound processor for ultimate system control and speaker protection
- ▲ Extremely powerful 12" / 15" long-excursion driver provides incredibly deep bass and acoustic power
- ▲ State-of-the-art 1.25" titanium-diaphragm compression driver for exceptional high-frequency reproduction
- ▲ Ultra-wide dispersion and large format exponential/conical horn with multi-cell aperture throat
- ▲ Ultra-low noise Mic/Line input with Volume control and Clip LED
- ▲ Dedicated 2-band EQ for perfect sound adjustment
- ▲ Additional Line output allows linking of additional speaker systems
- ▲ Versatile trapezoidal enclosure design allows different positioning:
  - Stand mounting with 35-mm pole socket
  - Tilts on its side for use as a floor monitor
- ▲ Ergonomically shaped handles for easy carrying and setup
- ▲ High-quality components and exceptionally rugged construction ensure long life
- ▲ Conceived and designed by BEHRINGER Germany

## Foreword



Dear customer,  
welcome to the team of EUROLIVE users, and thank you very much for expressing your confidence in us by purchasing these PA loudspeakers.

Writing this foreword for you gives me great pleasure, because it represents the culmination of many months of hard work delivered by our engineering team to achieve a very ambitious goal: to develop an outstanding PA system that offers a maximum in flexibility and performance

through its impressive sound character and outstanding features. The task of designing our new B312A/B315A certainly meant a great deal of responsibility, which we assumed by focusing on you, the discerning user and musician. Meeting your expectations also meant a lot of work and night shifts. But it was fun, too. Developing a product usually brings a lot of people together, and what a great feeling it is when all who participated in such a project can be proud of what they've achieved.

It is our philosophy to share our enjoyment with you, because you are the most important member of the BEHRINGER team. With your highly competent suggestions for new products you've made a significant contribution to shaping our company and making it successful. In return, we guarantee you uncompromising quality as well as excellent technical and audio properties at an extremely reasonable price. All of this will enable you to give free rein to your creativity without being hampered by budget constraints.

We are often asked how we manage to produce such high-quality devices at such unbelievably low prices. The answer is quite simple: it's you, our customers! Many satisfied customers mean large sales volumes enabling us to get better purchasing terms for components, etc. Isn't it only fair to pass this benefit on to you? Because we know that your success is our success too!

I would like to thank all of you who have made the B312A/B315A possible. You have all made your own personal contributions, from the developers to the many other employees at this company, and to you, the BEHRINGER user.

My friends, it's been worth the effort!

Thank you very much,

Uli Behringer

## Table of contents

<b>1. Introduction</b> .....	<b>4</b>
1.1 Before you get started .....	4
1.1.1 Shipment .....	4
1.1.2 Initial operation .....	4
1.1.3 Online registration .....	5
<b>2. Control elements and connections</b> .....	<b>5</b>
<b>3. Application examples</b> .....	<b>6</b>
3.1 Using a mixing console .....	6
3.2 Using several B312A/B315A loudspeakers .....	6
3.3 Direct connection of a stereo signal source .....	6
<b>4. Installation</b> .....	<b>7</b>
<b>5. Specifications</b> .....	<b>7</b>
<b>6. Warranty</b> .....	<b>8</b>

## 1. Introduction

Thank you very much for expressing your confidence in BEHRINGER products by purchasing the EUROLIVE B312A/B315A. This active and extremely compact loudspeaker has been designed specifically for those applications in which space is a problem. The compact dimensions and the low weight, despite the high-performance power amp give this product maximum flexibility. The input section accepts both line-level or microphone-level sources. Additionally, the loudspeaker has a 2-band equalizer for accurate high and low-frequency control. All of these features make this loudspeaker a high-quality and highly reliable companion on the road.

### 1.1 Before you get started

#### 1.1.1 Shipment

Your B312A/B315A was carefully packed at the assembly plant to assure secure transport. Should the condition of the cardboard box suggest that damage may have taken place, please inspect the unit immediately and look for physical indications of damage.

☞ **Damaged equipment should NEVER be sent directly to us. Please inform the dealer from whom you acquired the unit immediately as well as the transportation company from which you took delivery. Otherwise, all claims for replacement/repair may be rendered invalid.**

☞ **Please always use the original packaging to avoid damage due to storage or shipping.**

☞ **Never let unsupervised children play with the B312A/B315A or with its packaging.**

☞ **Please dispose of all packaging materials in an environmentally friendly fashion.**

#### 1.1.2 Initial operation

Be sure that there is enough space around the unit for cooling. To avoid overheating, do not place the B312A/B315A on top of power amps or near radiators, etc.

☞ **Blown fuses must be replaced by fuses of the same type and rating. Please refer to the "Specifications" for further details.**

The mains connection is made using the enclosed power cord and a standard IEC receptacle. It meets all international safety certification requirements.

**⚠ Please make sure that all equipment is properly grounded at all times. For your own safety, never remove or disable the ground conductor of the unit or of the AC power cord.**

## IMPORTANT NOTES CONCERNING INSTALLATION

**⚠ The sound quality may diminish within the range of powerful broadcasting stations and high-frequency sources. Increase the distance between the transmitter and the device and use shielded cables for all connections.**

## ATTENTION!

**⚠ This loudspeaker is capable of producing extreme volumes. Please keep in mind that high sound pressures do not only temporarily damage your sense of hearing, but can also cause permanent hearing damage. Be careful to select a suitable volume at all times.**

### 1.1.3 Online registration

Please remember to register your new BEHRINGER equipment right after your purchase by visiting [www.behringer.com](http://www.behringer.com) (alternatively [www.behringer.de](http://www.behringer.de)) and read the terms and conditions of our warranty carefully.

Should your BEHRINGER product malfunction, our goal is to have it repaired as quickly as possible. To arrange for warranty service, please contact the retailer from whom the equipment was purchased. Should your BEHRINGER dealer not be located in your vicinity, contact directly one of our subsidiaries. Corresponding contact information is included in the original equipment packaging (Global Contact Information/European Contact Information). Should your country not be listed, please contact the distributor nearest you. A list of distributors can be found in the support area of our website ([www.behringer.com](http://www.behringer.com)).

Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

## 2. Control elements and connections

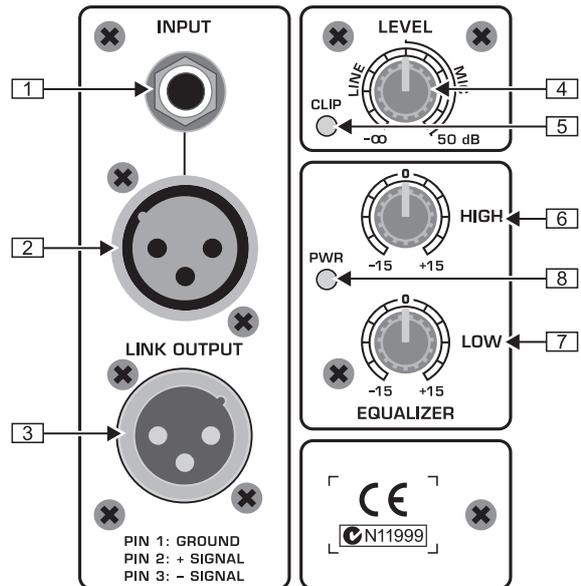


Fig. 2.1: Control elements and connections (B312A and B315A)

- 1 Use this 1/4" stereo jack to connect a signal source that has 1/4" output.
  - 2 Use this XLR connector to connect a signal source that has XLR output.
- ⚠ Always use either the XLR or the 1/4" jack input, and use the LEVEL control [4] to adapt the input sensitivity. Never use both inputs at the same time!**
- 3 The *LINK OUTPUT* is directly connected to the inputs of the B312A/B315A and carries the input signal with no processing applied. In this way, you can route the signal to the input of another device (for example, a second B312A/B315A).
  - 4 To set the volume of the *LINE* or *MIC* signal, use the *LEVEL* control. The left half of the control range is for attenuating the *LINE* signal. The right half is for raising the level of the *MIC* signal.
  - 5 The *CLIP* LED lights up when signal distortion occurs. Reduce the volume with the *LEVEL* control until the *CLIP* LED does not light up any more, or occasionally lights up at signal peaks.
- ⚠ We would like to draw your attention to the fact that extremely loud sound levels may damage your hearing as well as your headphones/loudspeakers. Turn the LEVEL control fully to the left before you switch on the unit. Be careful to select a suitable volume at all times.**
- 6 The *HIGH* control adjusts the high-frequency range.
  - 7 Use the *LOW* control to raise the level of the low-frequency range.
  - 8 The *PWR* LED lights up when the loudspeaker is put into operation.

# EUROLIVE B312A/B315A

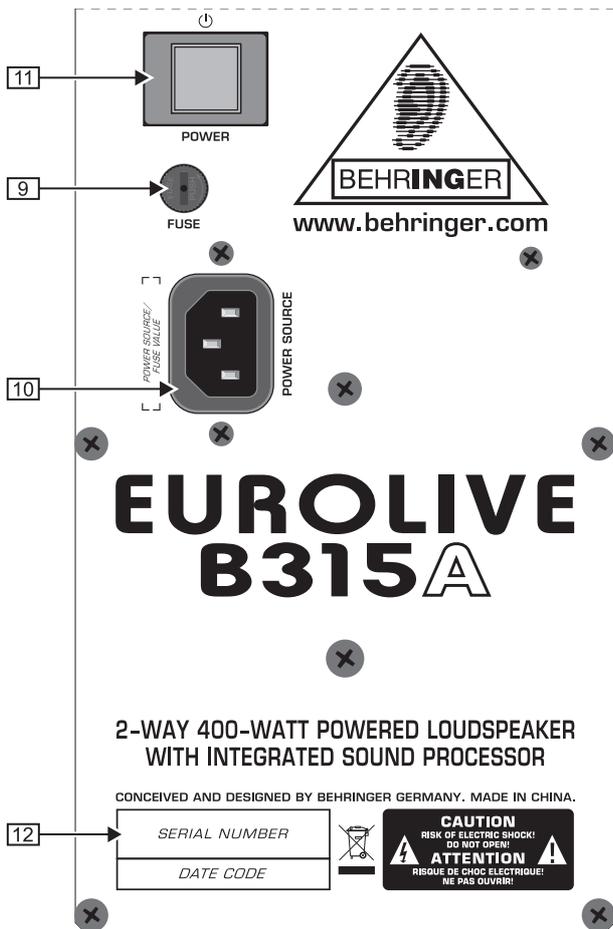


Fig. 2.2: Control elements and connections (B312A and B315A)

- 9 You can replace fuses at the *FUSE SWITCH* of the B312A/B315A. Always replace fuses with the same type. Please follow the instructions given in chapter 5 "Specifications."
- 10 The mains connection is established using a cable with an IEC mains connector. This cable is delivered with the B312A/B315A. To avoid ground-loop hum, loudspeakers and mixing consoles should be connected to the same power circuit.
- 11 Press *POWER* to turn on your B312A/B315A.
- ⚠ **Attention:** The **POWER** switch does not fully disconnect the unit from the mains. To disconnect the unit from the mains, pull out the main cable plug or appliance coupler. When installing the product, ensure the plug or appliance coupler is readily operable. Unplug the power cord completely when the unit is not used for prolonged periods of time.
- 12 *SERIAL NUMBER*

## 3. Application examples

⚠ Turn the **LEVEL** control fully to the left before you switch on the unit with the **POWER** switch. Then, raise the volume to a suitable level.

### 3.1 Using a mixing console

A common way to use 2 B312A/B315A loudspeakers is with a mixing console. In this case, connect each of the main outputs that are on the mixing console to a B312A/B315A loudspeaker. The B312A/B315A includes XLR and 1/4" connectors. To avoid interference, use only XLR or 1/4" jack cables.

### 3.2 Using several B312A/B315A loudspeakers

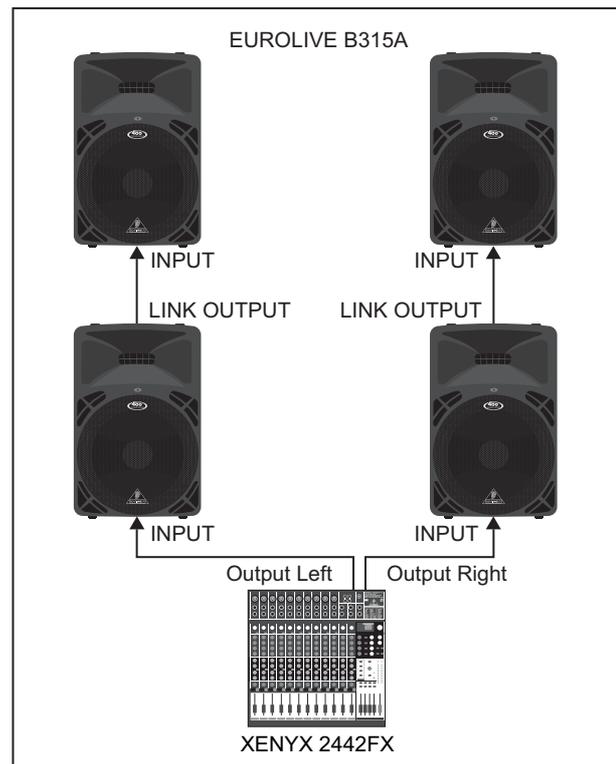


Fig. 3.1: Wiring several B312A/B315A loudspeakers using the *LINK OUTPUT* connector

For larger rooms, you can connect several B312A/B315A speakers using the *LINK OUTPUT* connector (see fig. 3.1).

### 3.3 Direct connection of a stereo signal source

When you use two B312A/B315A loudspeakers, you can directly connect one stereo signal source, for example, a CD player. In this case, each of the speakers is connected to 1 signal-source output. (If necessary, use the appropriate adaptor.)

## 4. Installation

Both audio inputs of the BEHRINGER B312A/B315A and the LINK OUTPUT connector are fully balanced. To maximize interference compensation, try to establish balanced connections to other equipment, whenever possible.

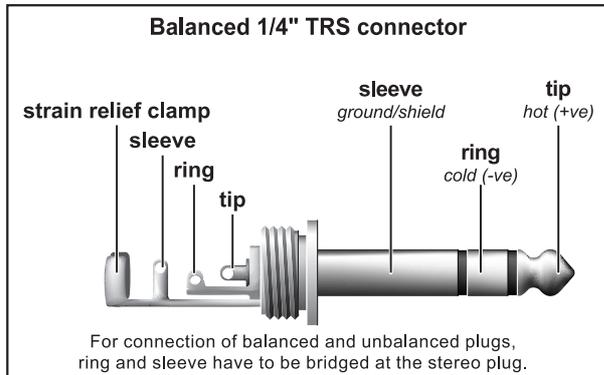


Fig. 4.1: 1/4" TRS connector

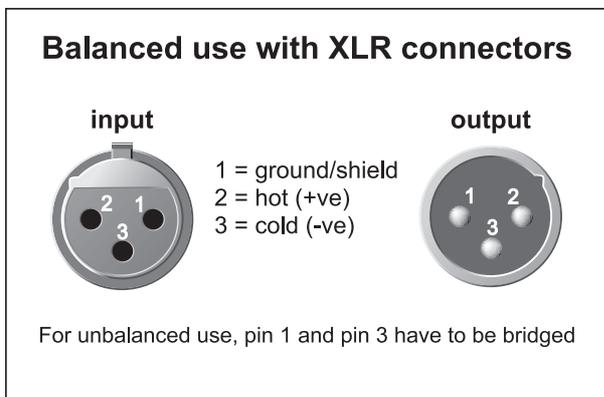


Fig. 4.2: XLR connector

**⚠️ Make sure that only competent people install your B312A/B315A. They must be sufficiently earthed during and after the installation process. Otherwise, electrostatic discharges may negatively affect the operating characteristics of your equipment.**

## 5. Specifications

### OUTPUT POWER

#### Low-frequency range

RMS @ 1% THD 200 W @ 8 Ω  
Peak power 300 W @ 8 Ω

#### High-frequency range

RMS @ 1% THD 50 W @ 8 Ω  
Peak power 80 W @ 8 Ω

### INPUT

#### XLR connector (servo-balanced)

Sensitivity -40 to +4 dBu  
Input impedance 20 kΩ

#### 1/4" jack (servo-balanced)

Sensitivity -40 to +4 dBu  
Input impedance 20 kΩ

### LINK OUTPUT

#### XLR connector

### LOUDSPEAKER SYSTEM DATA

#### B312A

Frequency range 65 Hz to 20 kHz  
Crossover frequency 2.4 kHz (12 dB)  
Maximum sound pressure level 125 dB @ 1 m  
Limiter optical  
Dynamic Equalizer Processor-controlled

#### B315A

Frequency range 55 Hz to 20 kHz  
Crossover frequency 1.9 kHz (12 dB)  
Maximum sound pressure level 126 dB @ 1 m  
Limiter optical  
Dynamic Equalizer Processor-controlled

### EQUALIZER

HIGH 12 kHz / ±15 dB  
LOW 80 Hz / ±15 dB

### POWER SUPPLY

Power consumption max. 450 W

### Mains voltage / Fuse

100 - 120 V~ (50/60 Hz) T 5.0 A H 250 V  
220 - 240 V~ (50/60 Hz) T 2.5 A H 250 V  
Mains connector Standard IEC receptacle

### PHYSICAL/WEIGHT

#### B312A

Dimensions (H x W x D) approx. 25.9 " x 15.5 " x 15.1 "  
( 658 mm x 394 mm x 384 mm)  
Weight approx. 53.4 lbs (24.2 kg)

#### B315A

Dimensions (H x W x D) approx. 28.8 " x 18.5 " x 16.7 "  
(732 mm x 470 mm x 424 mm)  
Weight approx. 61.8 lbs (28.0 kg)

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.

## 6. Warranty

### § 1 OTHER WARRANTY RIGHTS AND NATIONAL LAW

1. This warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract.
2. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.

### § 2 ONLINE REGISTRATION

Please do remember to register your new BEHRINGER equipment right after your purchase by visiting [www.behringer.com](http://www.behringer.com) (alternatively [www.behringer.de](http://www.behringer.de)) and kindly read the terms and conditions of our warranty carefully.

Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

### § 3 WARRANTY

1. BEHRINGER (BEHRINGER International GmbH including all BEHRINGER subsidiaries listed on the enclosed page, except BEHRINGER Japan) warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of one (1) year\* from the original date of purchase, in accordance with the warranty regulations described below. If the product shows any defects within the specified warranty period that are not excluded from this warranty as described under § 5, BEHRINGER shall, at its discretion, either replace or repair the product using suitable new or reconditioned parts. In the case that other parts are used which constitute an improvement, BEHRINGER may, at its discretion, charge the customer for the additional cost of these parts.
2. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid.
3. Warranty claims other than those indicated above are expressly excluded.

### § 4 RETURN AUTHORIZATION NUMBER

1. To obtain warranty service, the buyer (or his authorized dealer) must call BEHRINGER (see enclosed list) during normal business hours **BEFORE** returning the product. All inquiries must be accompanied by a description of the problem. BEHRINGER will then issue a return authorization number.
2. Subsequently, the product must be returned in its original shipping carton, together with the return authorization number to the address indicated by BEHRINGER.
3. Shipments without freight prepaid will not be accepted.

### § 5 WARRANTY REGULATIONS

1. Warranty services will be furnished only if the product is accompanied by a copy of the original retail dealer's invoice. Any product deemed eligible for repair or replacement under the terms of this warranty will be repaired or replaced.

2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation.

3. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, crossfaders, potentiometers, keys/buttons, tubes, guitar strings, illuminants and similar parts.

4. Damages/defects caused by the following conditions are not covered by this warranty:

- ▲ improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals.
- ▲ connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.
- ▲ damages/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER.

5. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.

6. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer.

7. Products which do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. BEHRINGER will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

### § 6 WARRANTY TRANSFERABILITY

This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BEHRINGER.

### § 7 CLAIM FOR DAMAGES

Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product.

\* Customers in the European Union please contact BEHRINGER Germany Support for further details.

Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing. The names of companies, institutions or publications pictured or mentioned and their respective logos are registered trademarks of their respective owners. Their use neither constitutes a claim of the trademarks by BEHRINGER nor affiliation of the trademark owners with BEHRINGER. BEHRINGER accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colors and specification may vary slightly from product. Products are sold through our authorized dealers only. Distributors and dealers are not agents of BEHRINGER and have absolutely no authority to bind BEHRINGER by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER International GmbH. BEHRINGER® is a registered trademark.

ALL RIGHTS RESERVED. © 2007 BEHRINGER International GmbH,  
Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Münchheide II, Germany.  
Tel. +49 2154 9206 0, Fax +49 2154 9206 4903

## EUROLIVE B312A/B315A

---

### FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION



en

Responsible party name: BEHRINGER USA, Inc.  
Address: 18912 North Creek Parkway, Suite 200  
Bothell, WA 98011, USA  
Phone/Fax No.: Phone: +1 425 672 0816,  
Fax: +1 425 673 7647

hereby declares that the product

### **EUROLIVE B312A/B315A**

complies with the FCC rules as mentioned in the following paragraph:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▲ Reorient or relocate the receiving antenna.
- ▲ Increase the separation between the equipment and receiver.
- ▲ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▲ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important information:

Changes or modifications to the equipment not expressly approved by BEHRINGER USA can void the user's authority to use the equipment.

[www.behringer.com](http://www.behringer.com)

