



Reason Layout

OldDrm Treb Bass
Ch 7 -17 11

FootSwitch
(unused)

ANY SOLO
AUTO
WRITE
READ

Device name
On/off/bypass

Solo
Clear all solos

Mute
Clear all mutes

LEGEND
Normal
Shift

PAN SEND EQ PLUG-IN AUTO

device-specific device-specific device-specific device-specific

F1 F2 F3 F4

Previous track Next track Loop on/off Undo
Previous patch Next patch Reset override Motor on/off

RTZ END ESC ENTER MODE

Rewind	FFwd	Stop	Play	Record
Go to left loc.	Go to right loc.	(local settings)	Click on/off	Overdub/replace

Left Tap	One Finger	Two Finger	Right Tap
Select left locator	Move 1-beat	Move 4-beats	Select right locator

FRONTIER



Pan Mode

1a | _____
1b | _____

Send Mode

2a | _____
2b | _____

EQ Mode

3a | _____
3b | _____

Plug-In Mode

4a | charlie should do something
4b | _____

Auto Mode

5a | _____
5b | _____

Notes

The fader, encoder, and F-button functions are device-specific. See the full documentation for notes on touch strip operation, and detailed device mappings.