

Helix Shortcuts (2.0)

New or enhanced shortcuts (did not appear in 1.0 manual) appear **bold**.

	Function	Shortcut
	Select item assigned to footswitch	Touch footswitch
	Select multiple items assigned to footswitch	Touch footswitch repeatedly to cycle through items
	Assign selected block to footswitch	Touch footswitch for 2 seconds, press Knob 6 (OK)
	Swap all assignments across two footswitches	Touch two stomp footswitches for 2 seconds, press Knob 6 (OK)
	Rename a stomp footswitch	Touch footswitch for 2 seconds, press Knob 5 (Customize)
	Assign a parameter to a controller	Press and hold parameter knob, press Knob 6 (Learn Controller), move controller
	Assign a parameter to the Snapshots controller	Press and turn parameter knob
	Unassign a controller assignment	Hold BYPASS and press the parameter knob
	Copy a snapshot	While touching the source snapshot switch, briefly touch the destination snapshot switch
	Swap two snapshot footswitch locations	Touch two snapshot footswitches for 2 seconds, press Knob 6 (OK)
	Toggle the Global Settings > Preferences > Snapshot Edits parameter	Hold BYPASS and press SAVE (gray camera icon = Recall; red camera icon = Discard)
	View Amp+Cab, Amp, or Preamp tonestack parameters	Press [AMP]
	Jump from one end of the signal path to the other	Move left from an input block to jump to the output block; move right from an output block to jump to the input block (the "Pac Man shortcut")
	Set specific tempo	Touch TAP, turn knob 6 (BPM)
	Set Tempo reference (Per Snapshot, Per Preset, or Global)	Touch TAP, turn knob 5 (Tempo)
	Set FS1/FS7 function	Hold FS1 and FS7 for two seconds to cycle through Bank, Preset, or Snapshot Up/Down
	Reset parameter to default	Press parameter knob
	Change Delay or Mod Time or Speed parameter from ms/Hz to note values	Press Time or Speed knob
	Change Delay or Mod Time or Speed parameter from ms/Hz to note values in Pedal Edit Mode	Press and hold Time or Speed footswitch for two seconds
	Quickly scroll values in Pedal Edit Mode	Hold FS10 (VALUE -) or FS11 (VALUE +)
	Turn Global EQ on/off	Hold BYPASS for two seconds
	Save/Rename/Customize screens: Cycle selected character between A, a, 0, and [SPACE]	Press the joystick
	Set Output and Mixer block Level parameters to unity (0.0dB) and Pan parameters to center	Press parameter knob
	Save preset to same location	Press SAVE twice