



Wearing the Earphones

The following are some suggested ways of wearing the earphones.

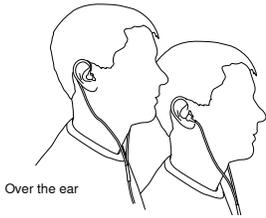

Inserting the Earphones

Insert the earphones so they form a tight seal. The fit of the earphone can greatly affect sound quality.

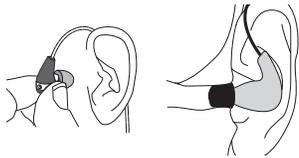

Important: If there seems to be a lack of low frequency response (bass), this means that the earphone sleeve is not forming a tight seal. Gently push the earphone deeper into the ear canal or try a different sleeve.

Warning: Do not push the earphone sleeve beyond the ear canal opening.

Removing the Earphones


Grasp the body of earphone and gently twist to remove.



Note: Do not pull on cable to remove earphone.

Changing Sleeves

- Twist and pull to remove the sleeve from the nozzle.
- Slide on a new sleeve so that it completely covers the barb and the nozzle.

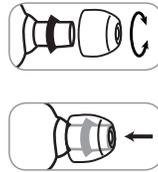

Caution: If the barb or any of the nozzle is exposed, the sleeve is not properly installed. Replace sleeves if they do not tightly grip the nozzle. To ensure proper fit and performance, use only sleeves supplied by Shure (unless using custom molded sleeves).

Choosing a Sleeve

Soft flex sleeves are included in small, medium, and large sizes. Select an earphone sleeve that provides the best fit and sound isolation. It should be easy to insert, fit comfortably, and easy to remove.



Soft Flex Sleeves

Using the Remote (m+ models only)

Use the remote to control compatible media phone players.

Play music	Click the center button once
Pause music	Click the center button once.
Change volume	Click the volume up (+) or volume down (-) button to increase or decrease the volume.
Go to next track	Double-click the center button.
Go to previous track	Triple-click the center button.
Restart current track	Triple-click after 6 seconds.
Fast-forward	Double-click and hold the center button.
Send/End Call	Click the center button once.

For more information about compatible models go to: www.shure.com

Cleaning the Nozzle

If you notice a change in sound quality, remove the sleeve and check the nozzle of your earphone. If nozzle is blocked, clear obstruction by using wire loop end of cleaning tool.



Warning: The cleaning tool is only to be used to clean the earphones. Any other use, such as using the tool to clean ears, could result in injury.

Maintenance and Cleaning

Careful maintenance ensures a tight seal between the sleeve and nozzle, improving sound quality and product safety.

- Keep the earphones and sleeves as clean and dry as possible.
- To clean sleeves, remove them from earphones, gently rinse in warm water and air dry. Foam sleeves require a longer drying time. Inspect for damage and replace if necessary. Ear sleeves must be completely dry before reusing.
- Wipe the earphones and sleeves with mild antiseptic to avoid infections. Do not use alcohol-based disinfectants.
- Do not expose earphones to extreme temperatures.
- Replace sleeves if they do not fit properly.
- Do not attempt to modify this product. Doing so will void the warranty and could result in personal injury and/or product failure.

Accessories

For information about earphone accessories and other Shure products visit:

www.shure.com

Furnished accessories subject to change.

Certifications

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

The CE Declaration of Conformity can be obtained from: www.shure.com/europe/compliance

Authorized European representative:
Shure Europe GmbH
Headquarters Europe, Middle East & Africa
Department: EMEA Approval
Jakob-Dieffenbacher-Str. 12
75031 Eppingen, Germany
Phone: 49-7262-92 49 0
Fax: 49-7262-92 49 11 4
Email: EMEAsupport@shure.de