



Positioning the SpiderCapo on your Guitar Fingerboard

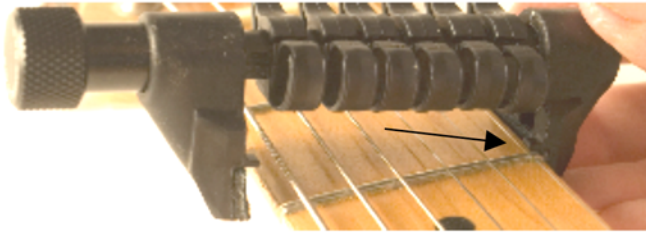

1. Place the TAB [see arrow] just behind the fret you want to capo, The KNOB is on the bass string side.

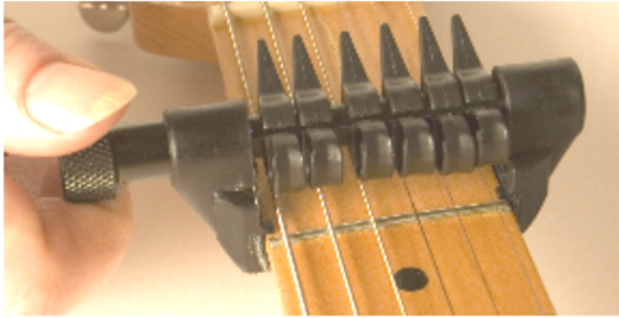

2. Tighten the KNOB enough so that you can locate the bass string TAB behind the fret. Then tighten the knob so that the LEATHER PADS squeeze the neck, and secure the SpiderCapo.

Make it nice and tight, dense ox leather protects the neck.



3. Use the FINGER HANDLES to align the FINGERS over the strings.



4. Rotate the FINGER HANDLES to capo each individual string as desired.

Complete instructions are posted at SpiderCapo.com

Warning: TABS must be placed ABOVE the face of the fingerboard before tightening the KNOB. TABS placed alongside the neck can be damaging to the guitar necks' finish.

SpiderCapo Parts

